

RALLY CUBE™

**V1
TENNIS BALL
LAUNCHER**

OWNER'S MANUAL

RALLYCUBE.COM

ALL RIGHTS RESERVED

IMPORTANT SAFETY INSTRUCTIONS

BEFORE USE

- READ THE OWNER'S MANUAL BEFORE OPERATING THE MACHINE.
- INSPECT THE MACHINE FOR DAMAGE OR LOOSE PARTS BEFORE EACH USE.
- USE ONLY ON STABLE, LEVEL GROUND TO PREVENT TIPPING.
- KEEP MACHINE DRY AND AVOID OPERATING IN RAIN OR STANDING WATER.
- DO NOT USE WET OR DIRTY TENNIS BALLS IN MACHINE.
- METAL ROD END IS SHARP. ALWAYS COVER WITH HOPPER CONNECTOR PIECE.

BALL LAUNCH SAFETY

- NEVER LOOK DIRECTLY INTO THE BALL EXIT OPENING.
- KEEP HANDS/BODY AWAY FROM THE BALL FEED AND LAUNCH MECHANISM.
- ASSUME MACHINE MAY FIRE A BALL AT ANY TIME WHEN BATTERY INSERTED.
- DO NOT STAND DIRECTLY IN FRONT OF MACHINE WHEN BATTERY IS INSERTED.

REMOTE CONTROL AND STARTUP

- REMOVE BATTERY BEFORE LOADING BALLS OR CLEARING JAMS.
- USE THE REMOTE CONTROL CAREFULLY, AS ACTIVATING IT UNEXPECTEDLY CAN LAUNCH BALLS.
- REMOVE BATTERY AND WAIT FOR THE FEED MECHANISM AND WHEELS TO STOP COMPLETELY BEFORE SERVICING THE MACHINE.

CHILDREN AND BYSTANDERS

- KEEP CHILDREN AND PETS AWAY FROM THE OPERATING AREA.
- DO NOT ALLOW CHILDREN TO OPERATE THE MACHINE WITHOUT ADULT SUPERVISION.
- ENSURE BYSTANDERS REMAIN OUTSIDE THE FIRING ZONE.

ELECTRICAL AND BATTERY SAFETY

- USE ONLY MILWAUKEE M18 BATTERIES (18V).
- FOLLOW BATTERY MANUFACTURERS INSTRUCTIONS FOR CHARGING AND USE.
- DO NOT USE THE MACHINE IN EXCESSIVE HEAT (90°F OR HIGHER).
- DO NOT USE THE MACHINE FOR MORE THAN 40 MINUTES CONTINUOUSLY. ALLOW 10 MINUTE BREAKS IN BETWEEN USE FOR MACHINE COOL-DOWN.
- FOLLOW BATTERY MANUFACTURERS INSTRUCTIONS FOR USE IN DIRECT SUNLIGHT AND DIFFERENT TEMPERATURES.

MAINTENANCE

 
- DO NOT INSERT FINGERS OR TOOLS INTO MOVING PARTS.
- REMOVE BALLS BEFORE TRANSPORTING OR STORING THE MACHINE.
- KEEP INSIDE OF MACHINE AND MACHINE OPENINGS FREE OF DEBRIS.
- REPLACE WORN OR DAMAGED PARTS ONLY WITH APPROVED REPLACEMENTS.

OPERATING ENVIRONMENT

- USE THE MACHINE ONLY WITH STANDARD TENNIS BALLS.
- AVOID OPERATING NEAR ROADS, WINDOWS, OR AREAS WHERE LAUNCHED BALLS COULD CAUSE INJURY OR PROPERTY DAMAGE.
- DO NOT MODIFY MACHINE.


TRANSPORT

- TURN THE MACHINE OFF AND REMOVE BATTERY BEFORE MOVING IT.
- REMOVE NET (BALL FEEDER/HOLDER) ATTACHMENT BEFORE MOVING.
- SECURE THE MACHINE DURING VEHICLE TRANSPORT TO PREVENT MOVEMENT.
- DO NOT DROP OR BUMP MACHINE AS THIS MAY CAUSE DAMAGE.

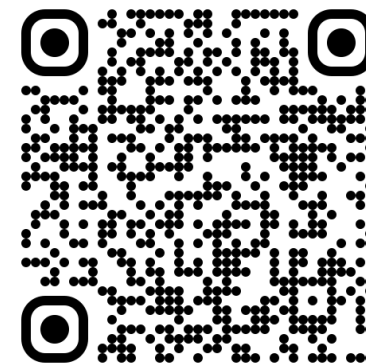

How To Use

 [VIDEO]

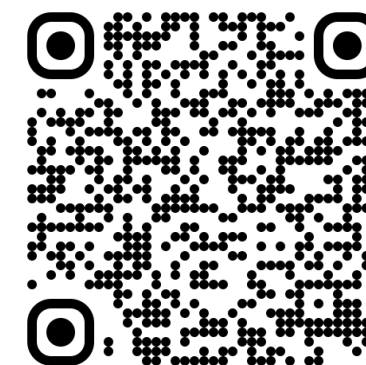


**ACCESSORIES
& REPLACEMENT
PARTS**




OWNER'S MANUAL

[DOWNLOAD]

 Toss

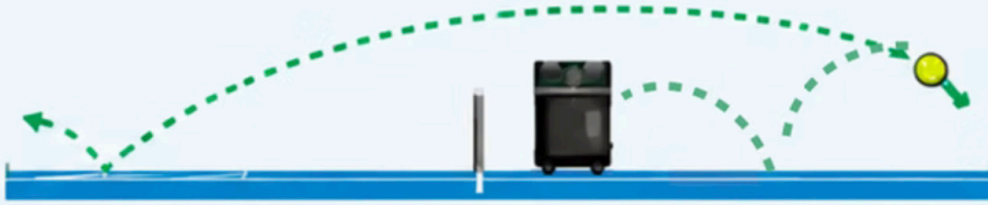

Volley

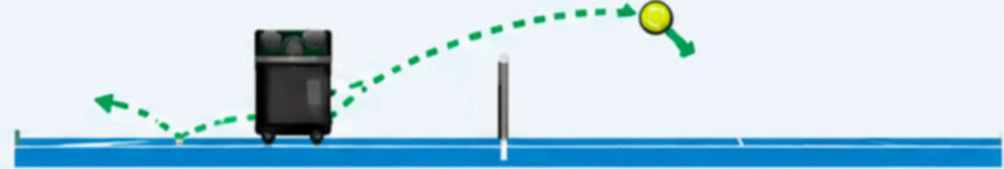 

SAVE THESE INSTRUCTIONS

WARNING:



METAL ROD END IS SHARP. ALWAYS COVER WITH HOPPER CONNECTOR PIECE.



Push to stop
Twist to reset

Turn + = Fast/Spin
Turn - = Slow/Flat

Turn o = Feed 10 Sec.
Turn ooo = Feed 2 Sec.

Remote:
ON = Machine Start
OFF = Machine Stop

How to Setup: 40 Ball



1. Remove Net Support Rod



2. Stack Rod in Top Holder



3. Attach Magnetic Feed Ramp & Plug



4. Add Magnetic Spacer




5. Place Hopper onto Spacer and align Ball Opening




6. Attach Strap Clip to Rod & Plug into Side Port

 Toss

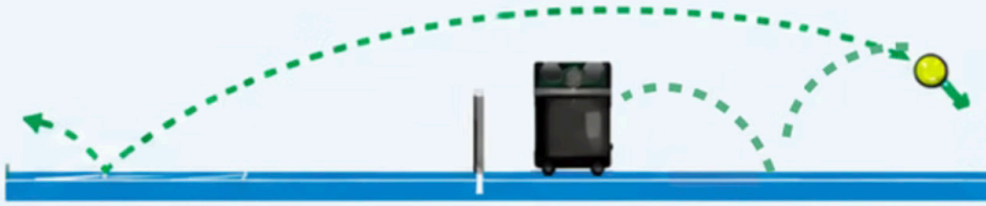

Volley

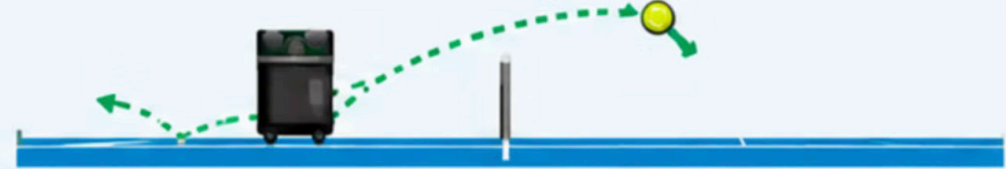 

WARNING:



METAL ROD END IS SHARP. ALWAYS COVER WITH HOPPER CONNECTOR PIECE.



Push to stop
Twist to reset

Turn + = Fast/Spin
Turn - = Slow/Flat

Turn o = Feed 10 Sec.
Turn ooo = Feed 2 Sec.

Remote:
ON = Machine Start
OFF = Machine Stop

How to Setup: 10 Ball



1. Remove Net Support Rod



2. Stack Rod in Top Holder



3. Attach Magnetic Feed Ramp & Plug



4. Attach Magnetic Hopper Net



5. Connect Net at top of Rod



6. Load with Tennis Balls